

Replacement Parts

- | | |
|---|--|
| 1 | 100-000 motor
Short fly wheel: models with socket
Long fly wheel: models without |
| 2 | 150-134 PCB 8 pin |
| 3 | 100-116 baseplate |
| 4 | 100-114 driving wheels (complete with cranks and rods) Please state colour of rods when ordering |
| 5 | 100-112 brake rodding left/right hand |
| 6 | 100-003 motor cradle with gears |
| 7 | 100-007 cab step and front steps (4) |

When ordering parts please quote the catalogue number together with the livery of the model (if appropriate) and number of the part required.

Parts are subject to availability.

Packets of couplers (item 36-030) suitable for the model are available from the retailers.

Note

Sandboxes and brake rodding parts must be unplugged from their locations to allow wheel sets to be removed for maintenance.

General

The Mechanism of this model requires running in (without a load) for approximately half an hour in each direction at a moderate speed, to allow the gear train to bed in.

When required, sparingly lubricate the motor bearings using plastic compatible light oil and the gear train with model grease.


Bachmann Branchline locomotives perform best on curves of second radius or greater (approx. 18 inches / 450 mm).

Bachmann Europe Plc

Moat Way, Barwell, Leicestershire
LE9 8EY
01455 841756

www.bachmann.co.uk

E3210 - IS001
Rev 13/06/14

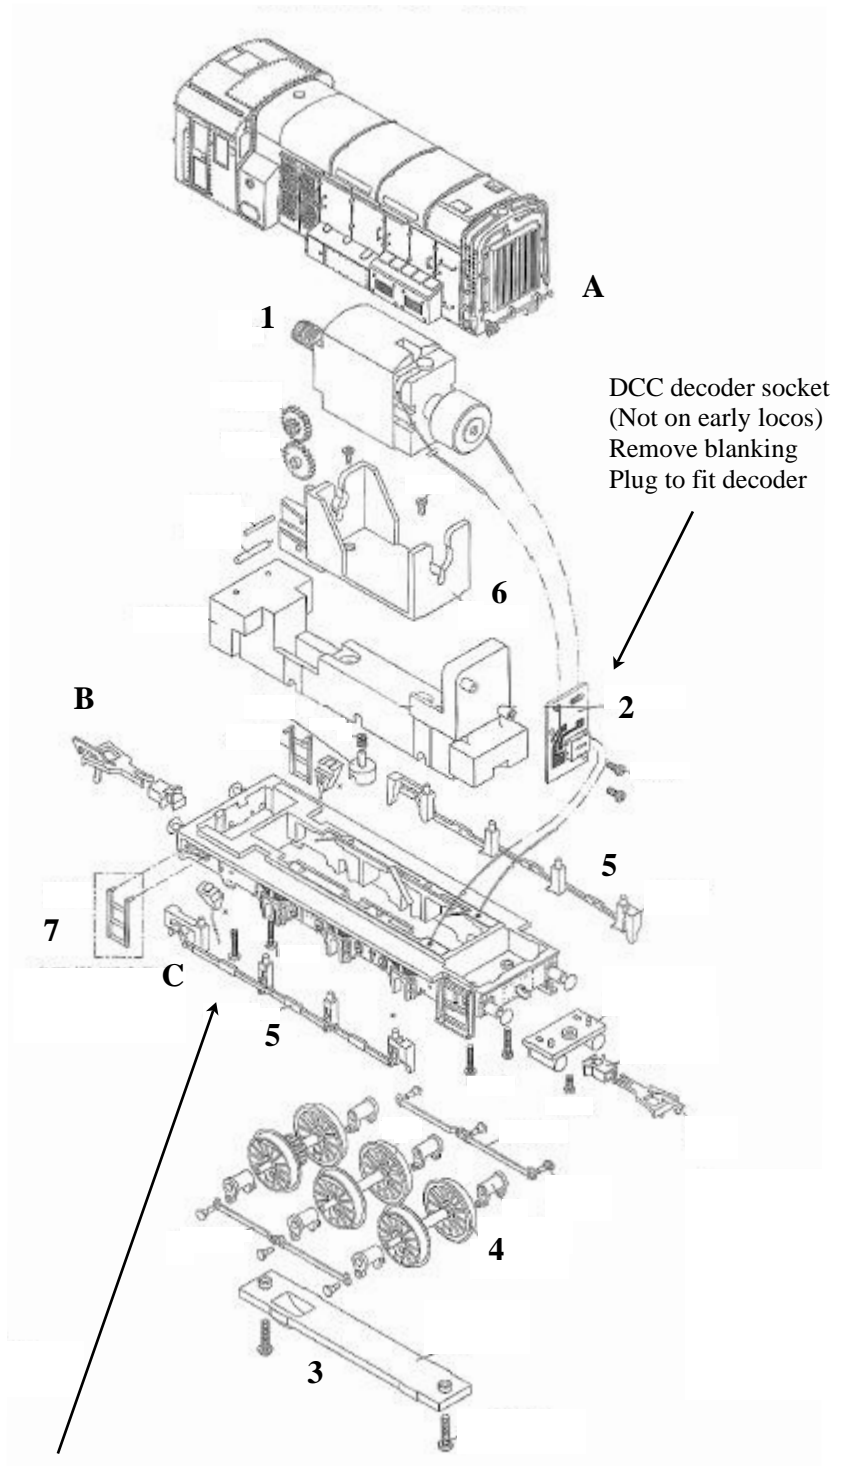

Body removal - Release the wire from the footplate front near "A". Remove rear coupling pocket B. Remove single screw "C" and release body clip adjacent. Cab and bonnet assembly will then pivot forwards to lift clear of the footplate.