

Thank you for your choice of the Bachmann Branchline Robinson D11 'Director' 4-4-0 tender locomotive.

Running in

The mechanism of this model requires running in (without a load) for approximately 1 hour, in each direction, at moderate speed.

Curves

Bachmann Branchline locomotives perform best on curves of second radius or greater (approx. 18 inches / 450 mm).

Bodyshell removal

Remove the screws as indicated on the diagrams (right).

DCC Decoder fitting to non DCC fitted loco

This model has an 21-pin socket for a decoder. Remove the DC blanking plug and fit the decoder to the pins with the black fitting uppermost. We recommend that the running in as above be carried out using a DC power supply before moving on to fit a DCC decoder

Lubrication

When required, sparingly lubricate the motor bearings using plastic compatible light oil and the gear train with model grease.

Replacement parts

When ordering parts please quote the catalogue number together with the livery of the model (if appropriate) and number of the part required.

Parts are subject to availability.

Packets of couplers (item 36-030) and buffers (item 36-032) suitable for this model are available from retailers.

The model should be handled carefully as it has many finely detailed parts. It is not suitable for persons under 14 years.

Bachmann Europe Plc

Moat Way, Barwell, Leicestershire, LE9 8EY
01455 841756

www.bachmann.co.uk


D11 rev 1 03/12

E3113-IS001




Bodyshell removal

Locomotive

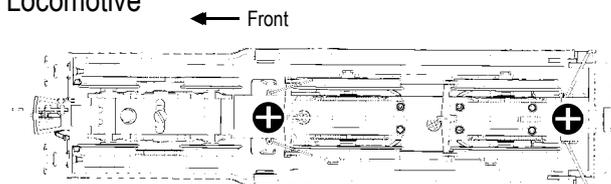


Loco chassis secured by screws at outside of driving wheels

Tender

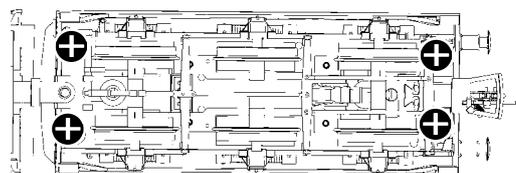

Tender shell secured by screws at corners

Add-on parts

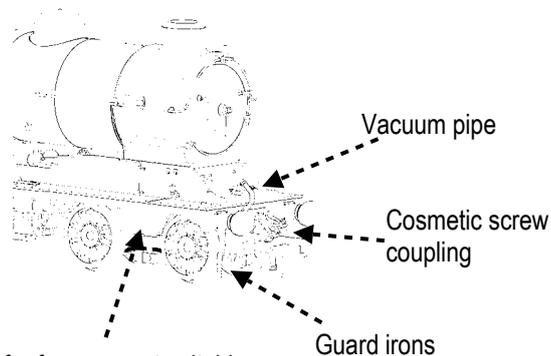



Fillets for frames - not suitable when run on tight radius curves

DCC Decoder fitting

1 - remove blanking plug (If necessary use pliers to grip edges of the PCB and ease off pins)

2 - fit decoder to pins with black fitting uppermost

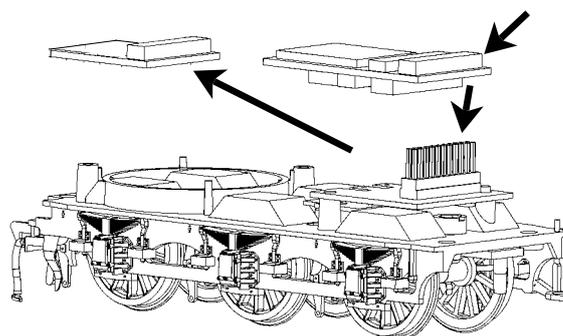

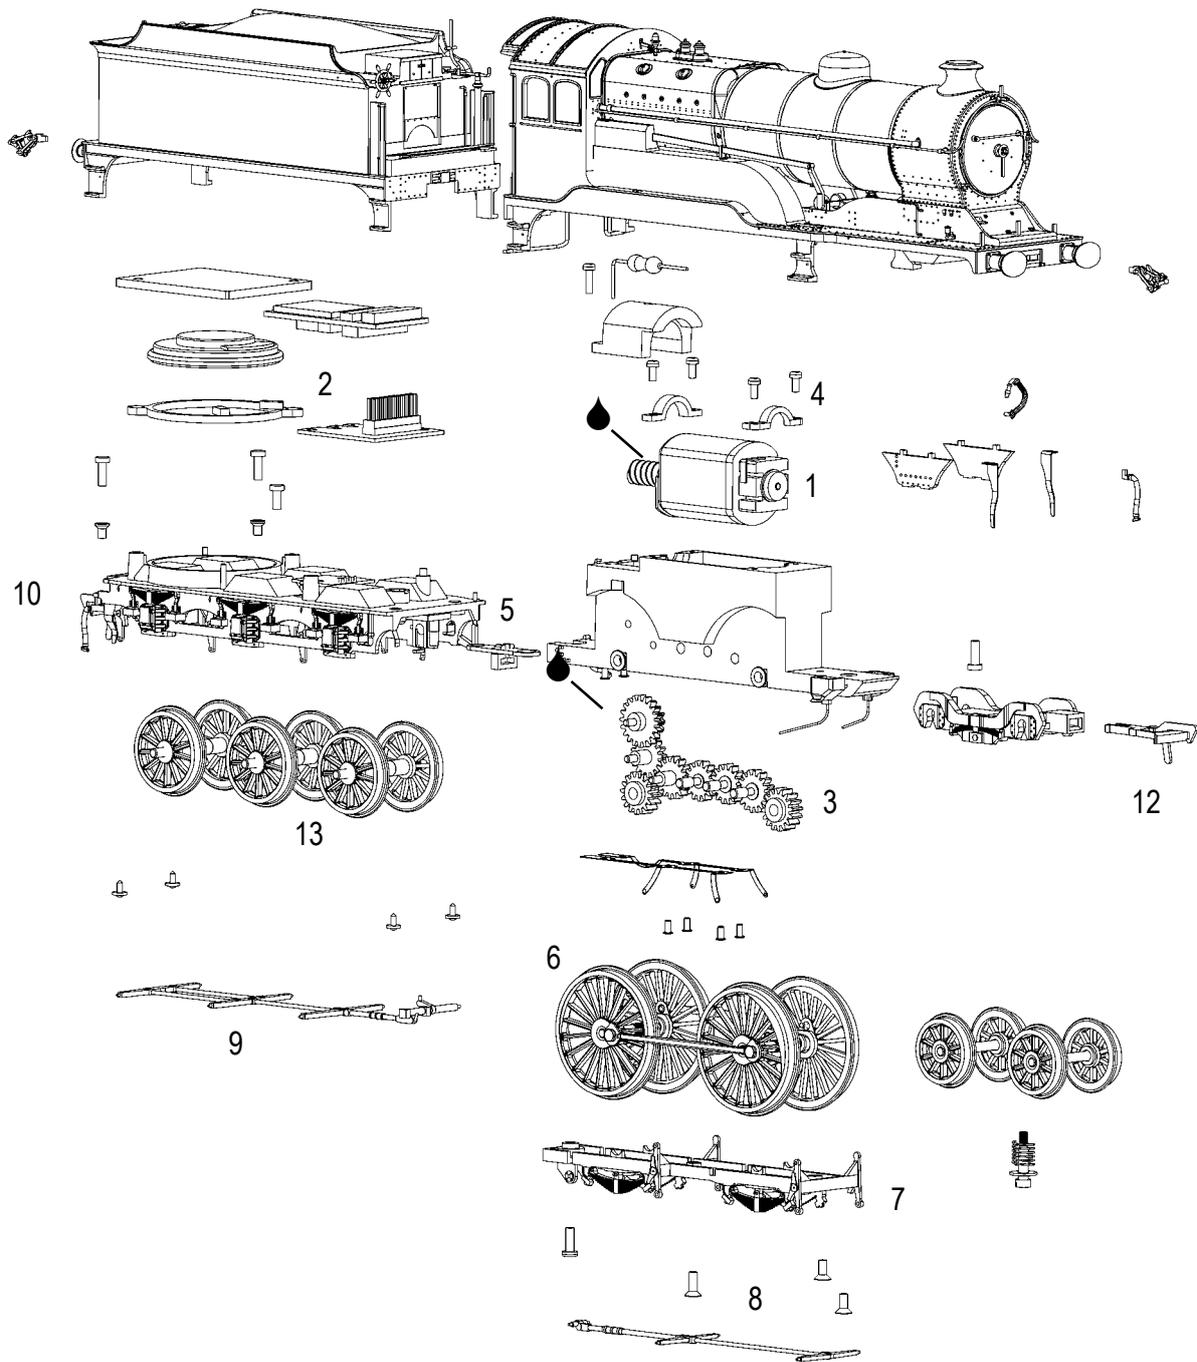

Parts

- | | | | |
|---|------------------------|----|-----------------------------|
| 1 | 135-106 motor | 8 | 135-122 loco brake rigging |
| 2 | 135-004 circuit board | 9 | 135123 tender brake rigging |
| 3 | 135-112 gears | 10 | 135-125 tender underframe |
| 4 | 135-113 motor clips | 11 | BL2006 NEM pocket |
| 5 | 135-130 drawbar | 12 | BL1999 coupling |
| 6 | 135-117 driving wheels | 13 | 135-126 tender wheels |
| 7 | 135-118 baseplate | | |

Parts are subject to availability.