
Accessories - Inner Bogie Sandboxes

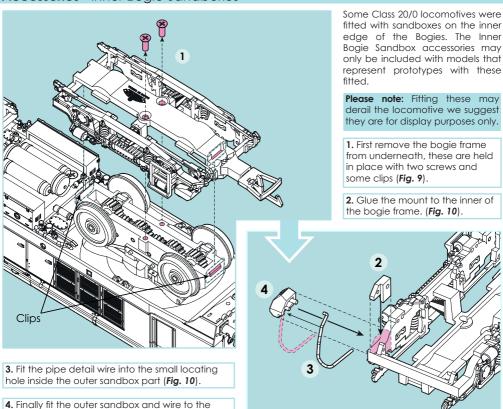

3. Running-in

It is necessary that this Locomotive is 'run-in' to allow the mechanism and gears to settle. This requires the model to be run without a load (wagons, coaches, etc.) for 30 minutes in each direction at half speed.

4. Lubrication

All Bachmann Branchline Locomotives are supplied ready lubricated and can be used straight from the box. Over time your locomotive will require some additional lubrication, when will depend on the frequency of use and storage, so please inspect your model on a regular basis.

If the driving wheel axles appear dry and no lubricant is visible (where shown pink in **fig.7**), it would be advisable to lubricate your model.

mount that's secured to the boaie (Fig. 10).

Please note:

A plastic compatible lubricant is required. We recommend the use of either **Bachmann Trains** E-Z Lube Light Gear Oil 99984 or Woodland Scenics Hob-E-Lube Lite Oil WHL554.

