



fig.11

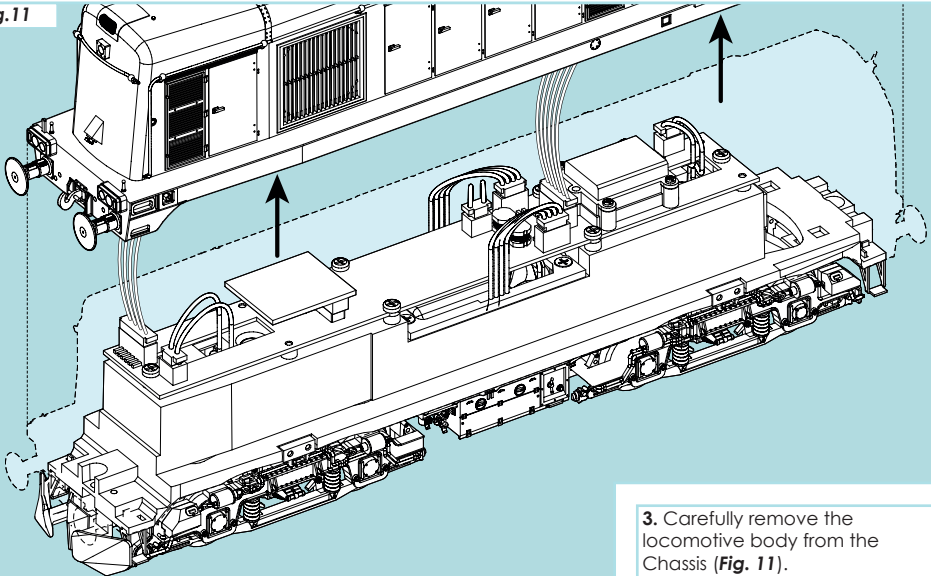

3. Carefully remove the locomotive body from the Chassis (Fig. 11).

fig.12

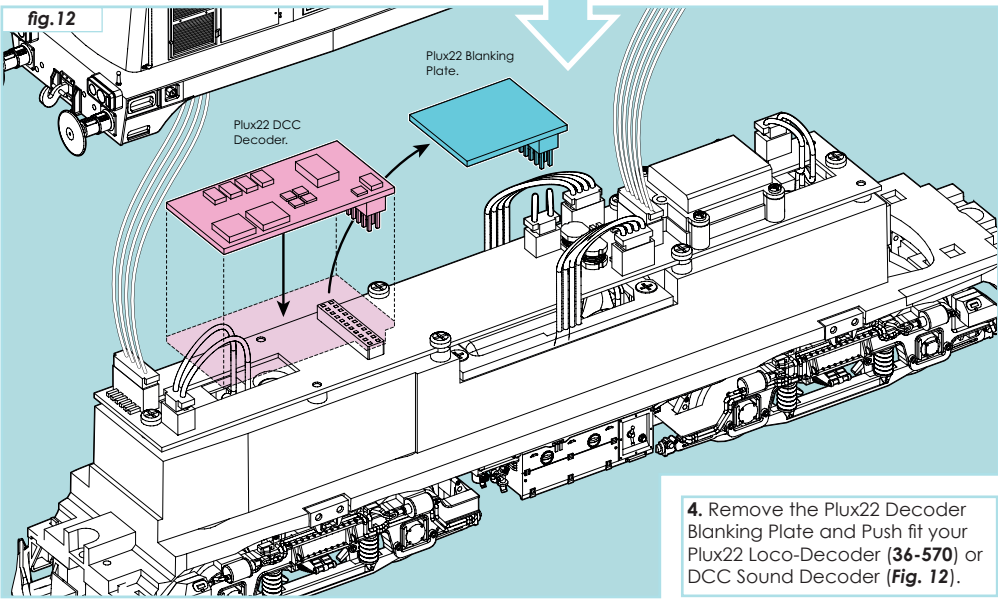

4. Remove the Plux22 Decoder Blanking Plate and Push fit your Plux22 Loco-Decoder (36-570) or DCC Sound Decoder (Fig. 12).

**36-570 Decoder Functions**

Key	Function
0	Directional Lights - On
1	Directional Lights Nose End - Off
2	Brake
3	Directional Lights Cab End - Off
5	Cab Interior Lights On

Once your Class 20/0 locomotive is fitted with a **36-570 Bachmann Plux22 Loco-Decoder** the DCC functions listed here can be operated with the corresponding Function Keys on your controller.

**Please note:** All chassis switches must be in the 'ON' position.