

Replacement Parts

- | | |
|---|---|
| 1 | 000-006 motor |
| 2 | 000-010 motor cradle |
| 3 | 000-021 valve gear |
| 4 | 000-038 complete bogie |
| 5 | 000-030 wheelset |
| 6 | 000-027 tender wheels |
| 7 | 000-031 baseplate |
| 8 | 000-034 brakerodding
(loco & tender) |

When ordering parts please quote the catalogue number together with the livery of the model (if appropriate) and number of the part required.

Parts are subject to availability.

Packets of couplers (item 36-030) suitable for the model are available from the retailers.

General

The mechanism of this model requires
Running in (without a load) for approximately half an hour in each direction at moderate speed to allow the gear train to bed in.

When required, sparingly lubricate the motor bearings using plastic compatible light oil and the gear train with model grease.


Bachmann Branchline locomotives perform best on curves of second radius or greater (approx. 18 inches / 450mm).

Bachmann Europe plc

Moat Way, Barwell,
Leicestershire
LE9 8EY
01455 841756

www.bachmann.co.uk

E3178 - IS001
Modified Hall
Rev 05/12

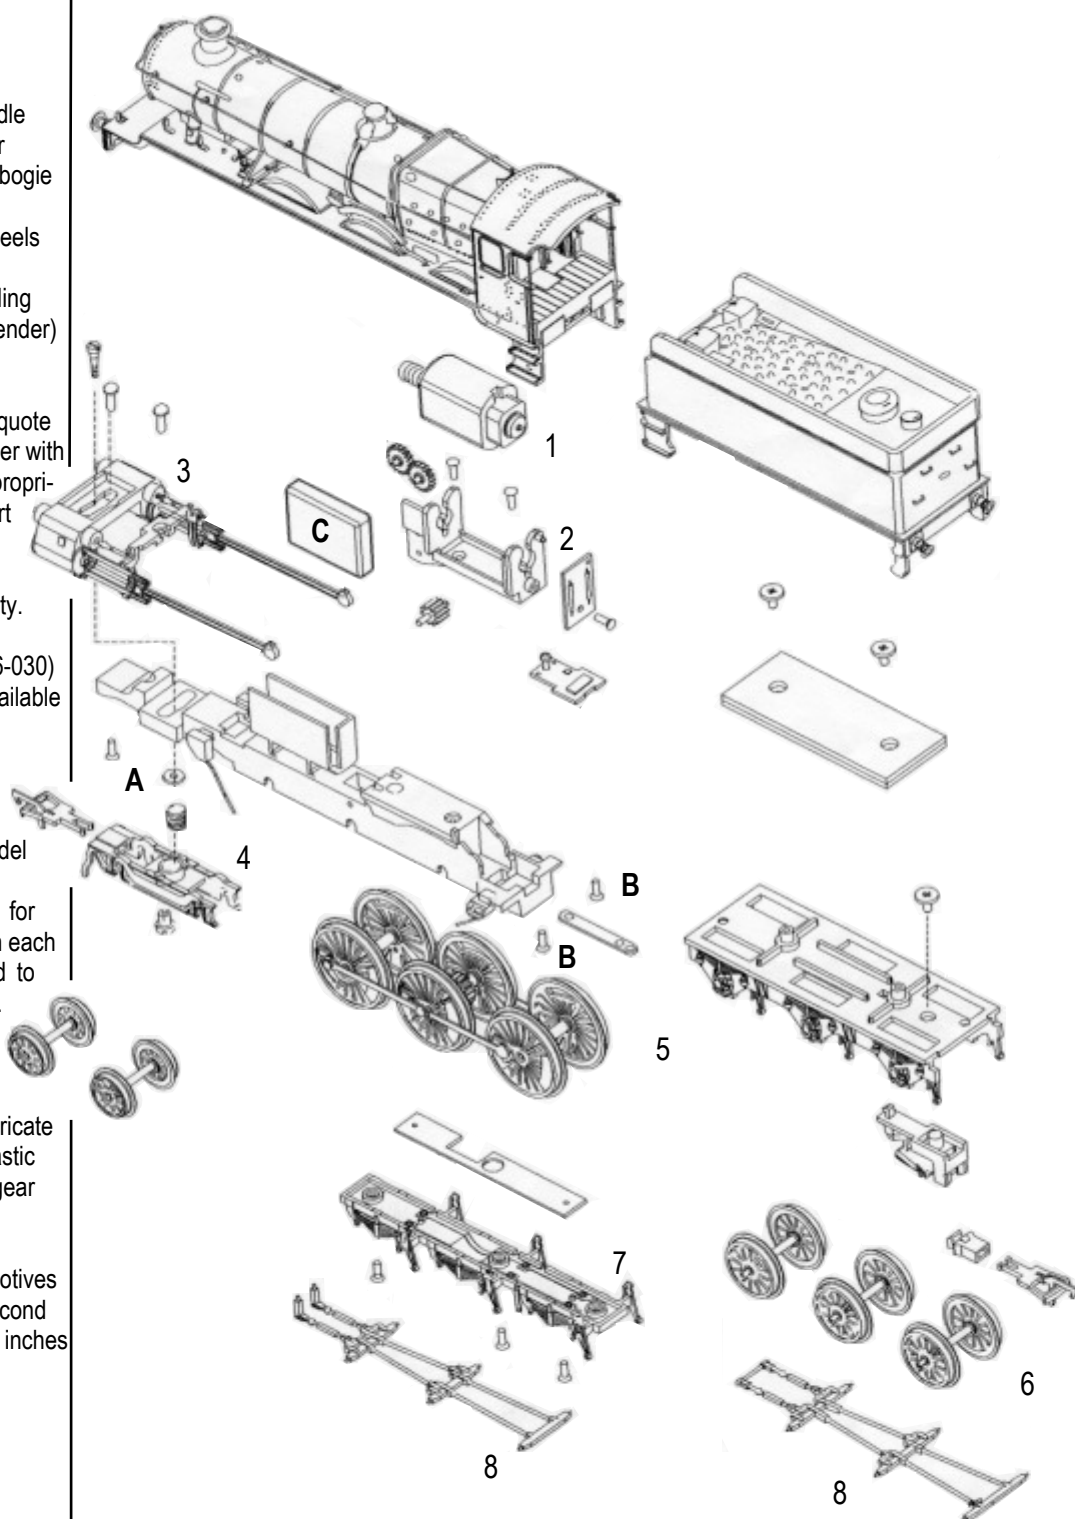

Body removal

Fitting screws indicated 'A' at front and 2 indicated 'B' at rear of baseplate

DCC Decoder fitting

Remove block indicated 'C' from cradle ahead of the motor and locate decoder in it. Remove 8pin planking plug from socket at rear of chassis and insert decoder plug. Decoder wires run in channel beside lower nearside of motor cradle.