

Welcome

Many thanks for purchasing one of our **Bachmann Branchline** Western Pullman Sound Fitted 6 Car Multiple Units. A lot of care was taken producing your model and we hope you enjoy it for many years to come.

Please note: This model has been designed to run on curves of **no less than 2nd Radius (438mm)**. We recommend that you don't use anything smaller as this may result in the model derailling.

1. Accessories

Although our models are highly detailed and ready to run straight from the box we also supply optional accessories to be fitted by the owner if they wish. Some of the accessories should only be fitted for static display as they may affect coupling or running quality, these parts will be labelled as such below.

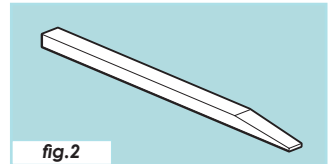
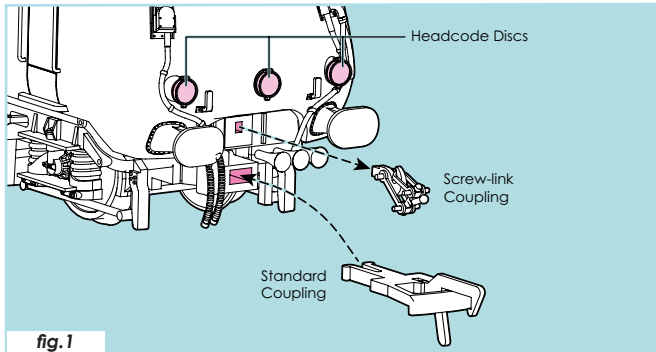


fig.2

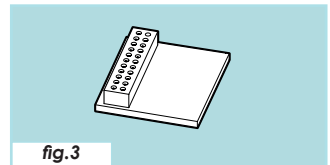



fig.3

Please note: PVA based adhesive should be used for the fitting of accessories.

- 1 **Headcode Discs** (Fig. 1)
- 2 **Standard Coupling** (Fig.1)
Screw-link Coupling must be removed first.

- 3 **Coupling Tool** (Fig.2)
- 4 **21Pin DCC Blanking Plate** (Fig.3)

2. Arrangement of Cars

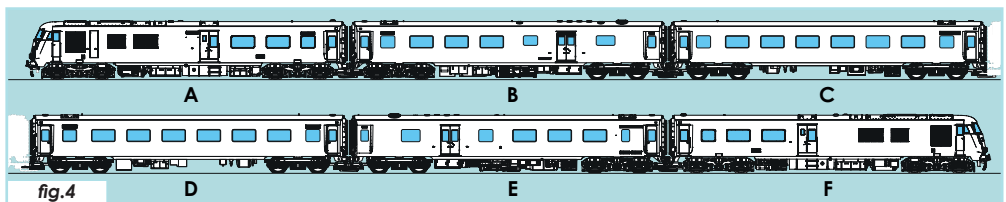

The Cars of your Western Pulman 6 Car Unit are labelled A - F on the sides, as per prototype, and also labelled on the underside of the chassis in white letters, this should help get your models into the correct order. Please refer to **fig.4** above for guidance.

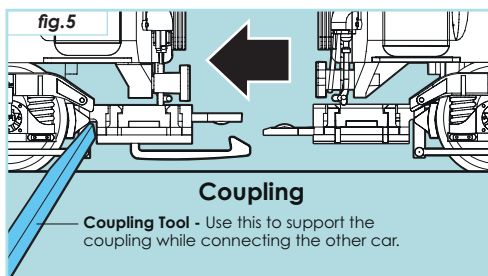


fig.5

Coupling

Coupling Tool - Use this to support the coupling while connecting the other car.

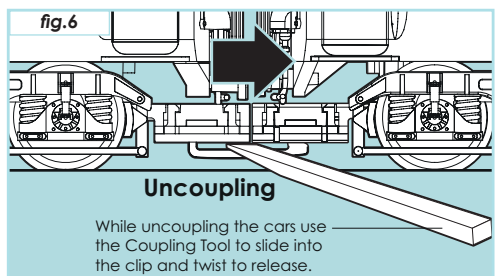


fig.6

Uncoupling

While uncoupling the cars use the **Coupling Tool** to slide into the clip and twist to release.